

## DFK - Drywall Flange Kit

### Need to install a recessed troffer into a hard top ceiling?


It's easy as 1, 2, 3!

1. Cut the opening
2. Wire up the corners
3. Drop in the Troffer. DONE!

### Features include:


- Extruded Aluminum Frames
- Tool-less Kit Assembly
- Baked White Enamel Finish

### DFK - Drywall Flange Kit

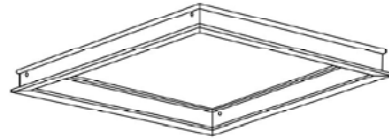


Flange Kit		Ceiling Opening	
Catalog Number	Size	Width	Length
DFK1x4	1' x 4'	12 - 3/8"	48 - 3/8"
DFK2x2	2' x 2'	24 - 3/8"	24 - 3/8"
DFK2x4	2' x 4'	24 - 3/8"	48 - 3/8"
DFK4x4	4' x 4'	48 - 3/8"	48 - 3/8"


#### FLANGE KIT INSTALLATION INSTRUCTIONS

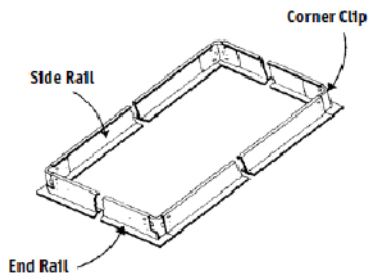

1. Cut ceiling opening to proper dimensions. Slip fit corner clips into side and end rails. No tools are required.

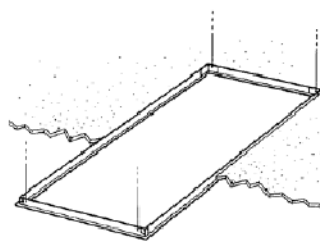

2. Place Flange Kit in ceiling opening and wire each corner to ceiling structure. Pull up tight against ceiling.

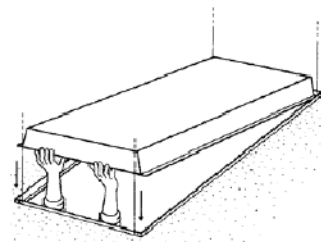

3. Place grid trim troffer in Flange Kit.